


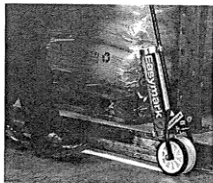

2 and 4 Wheel Applicator

When using EasyMark P or EasyMark T, all surfaces should be clean, dry and dust free.

1. Shake aerosol vigorously until agitator balls rattle and then continue shaking for a further 1 to 2 minutes.
2. Select line widths of 38mm, 50mm, and 75mm. To alter line width, remove wing nut from wheel yoke and position brackets in desired position. Refit and tighten wing nuts.
3. Stand the aerosol upright and fit plastic nozzle.
4. Invert the aerosol and push it into the spring clips on the applicator. Align the nozzle with the end of the trigger.
5. Pull trigger to activate aerosol and start painting. Masking discs inside the wheels ensure crisp, even lines.
6. Always remove aerosol from the applicator immediately after use. Stand the aerosol upright and spray for 2 to 5 seconds to clear the nozzle. Store aerosol on its side.
7. To clean the wheel discs, allow paint to dry, and then flex the discs so that the paint can be peeled off.
8. If aerosol nozzle becomes blocked during use, remove aerosol from applicator, stand it upright and repeatedly depress nozzle until it clears.



IMPORTANT

Read Warning Instructions on the EasyMark P and EasyMark T aerosol before use.