

VISOR REPLACEMENT

VISOR REPLACEMENT:

Scratched or damaged visors should be replaced. Replacement visors are available for all faceshields. Under normal circumstances the faceshield and visor should offer adequate protection for 2-3 years.

Tog Style:

1. To remove the old visor rotate all Togs so that they are in line with the slots in the visor.
2. Pull the visor away from the browguard.
3. Place the center hole of the new visor over the center Tog and rotate the Tog to hold the visor.
4. Push the visor over all Togs and rotate them to hold the visor securely.

Invincible & Cliptite:

1. Pull visor off press-studs at each end.
2. Disengage visor from center peg.
3. Reverse procedure to fit new visor.

Facesaver & Martcare:

1. Push out and retain stud securing visor to browguard.
2. Swing visor down and disengage visor keyhole slots from either side of browguard.
3. Reverse procedure to fit new visor

Surefit™:

1. To remove the old visor, press the top of it inwards so it comes away from pip and pull down. Repeat for other two pips.
2. Locate the new visor into the channel around the rim of the visor carrier.
3. Push the center of the visor inwards in order to locate the central hole over the central pip of the visor carrier.
4. Ensuring the visor is located in the channel on the relevant side locate the remaining two pips.