

Help for assembling a FloodFence bund/reservoir:

- This applies to fitting the corner units only.
- Main/straight units **do not** need any washer/nut removal
- For best gasket sealing on corners please also bolt together where indicated. Optional in the field.
- Use a fast flow outflow for filling. As the water height (weight) increases – the pressure on the ground seal increases.



Deploy one way
From corner



Locate final
corner to create
bund


Locate final
corner to create
bund



**For easy
insertion:**
Remove nut,
washer and black
spacer

REMOVE black nylon washer.
Screw down nut & washer fully,
ensuring gasket under pressure.



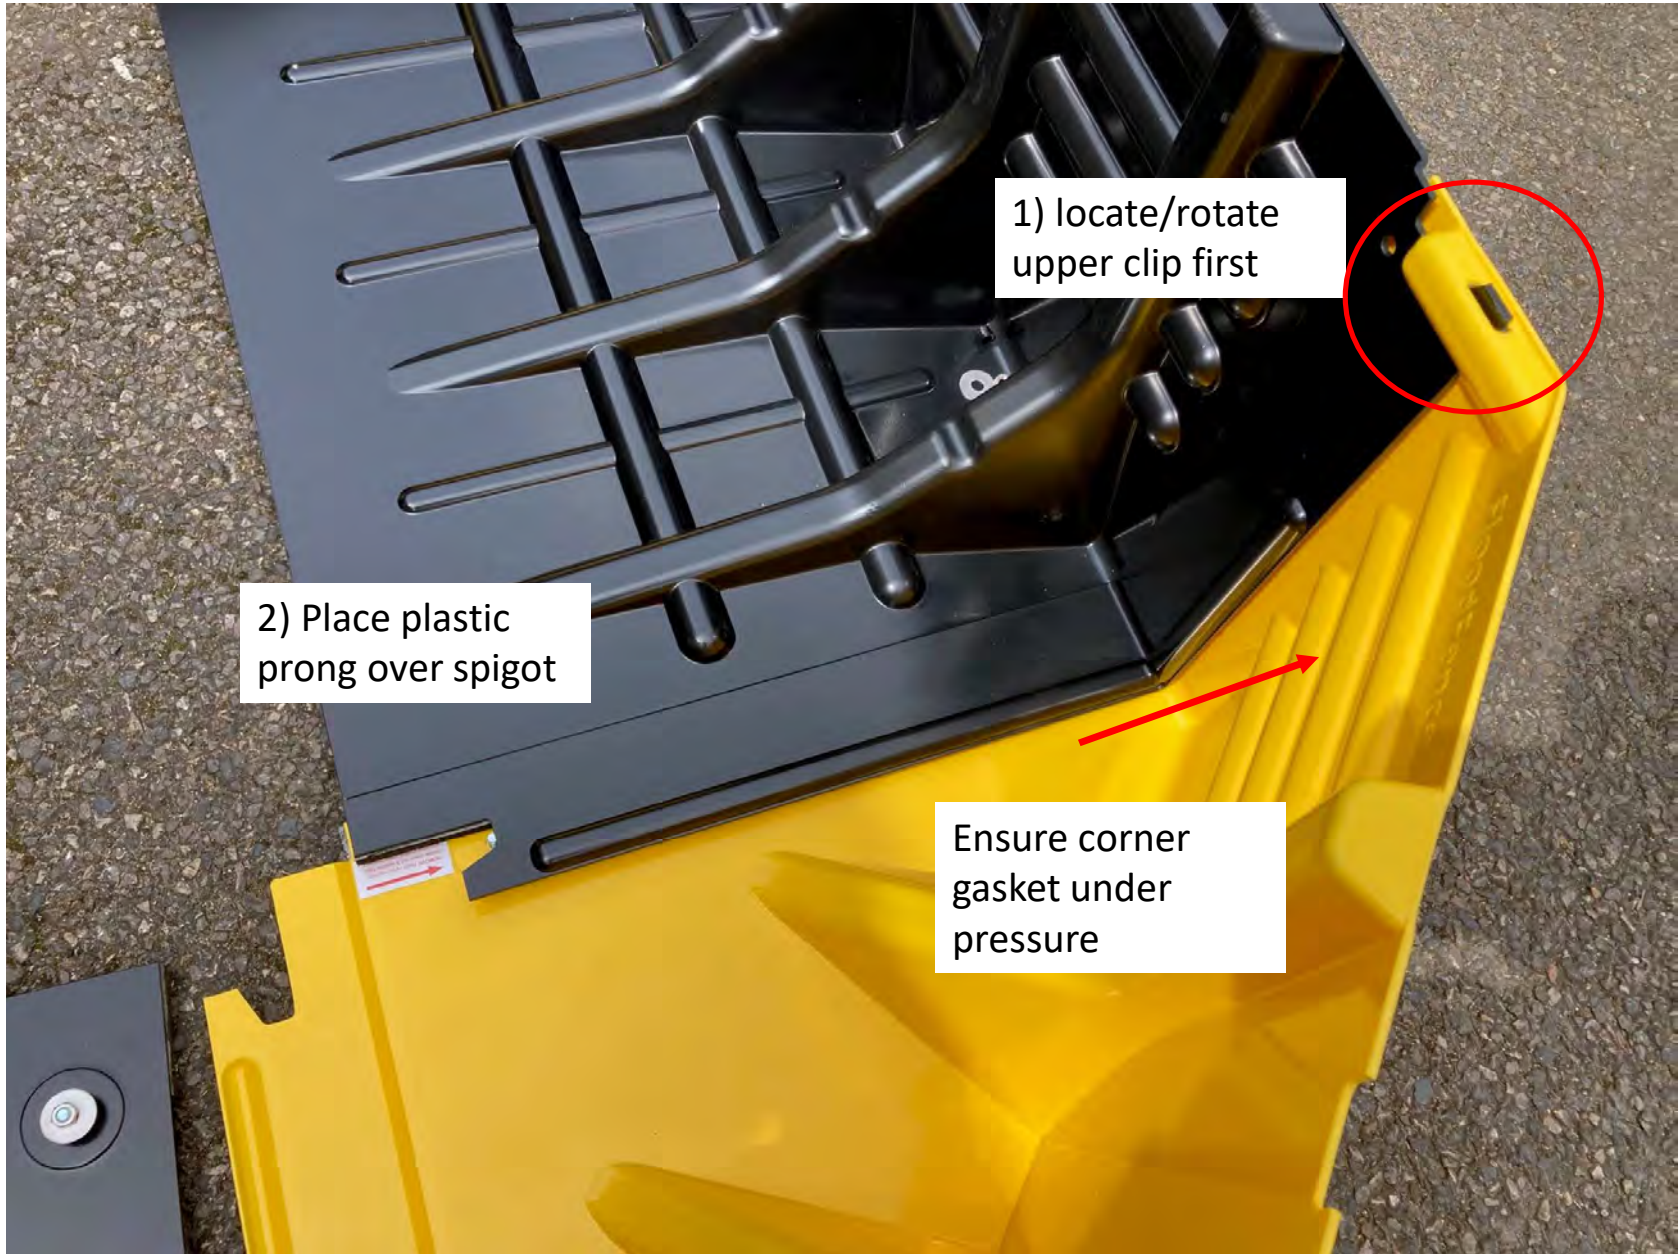

1) locate/rotate upper clip first

2) Place plastic prong over spigot

Ensure corner gasket under pressure



Place washer back
on the spigot and
tighten nut

Don't re-fit black
spacer





Place plastic prong over spigot



Place washer back
on the spigot and
tighten nut

Don't re-fit black
spacer



Corners can also
be bolted at these
locations

